


# Part Names - Main Unit

## Front view

LC-16E1

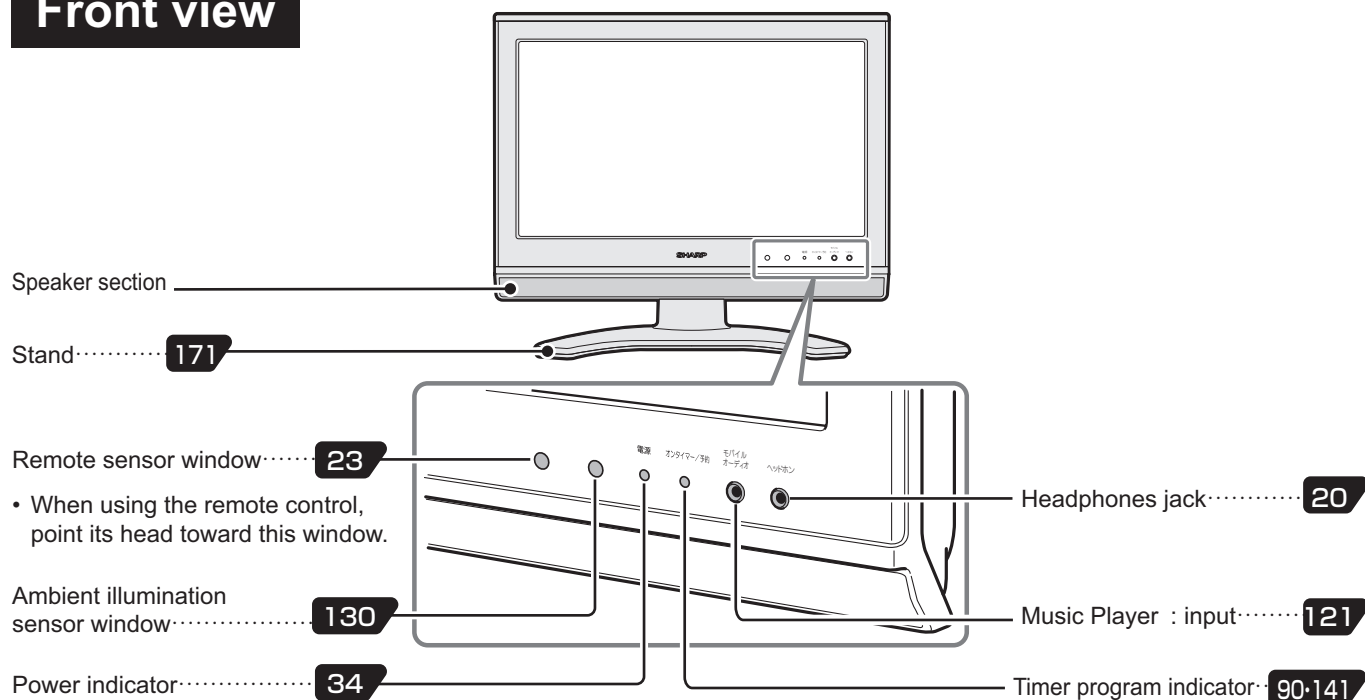


## Top view

LC-16E1

B-CAS card slot

- Open the cover and insert the B-CAS card in the direction shown below.

57

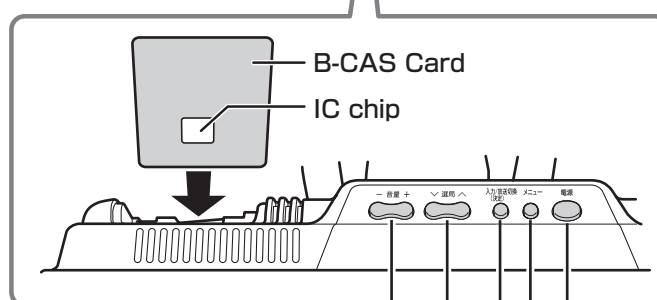

### Adjusting the LCD panel angle

- The LCD panel can be tilted up to 2° forward, up to 6° backward and rotated horizontally up to 10° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

Volume down (-) / up (+) buttons

Channel down (V) / up (Λ) buttons

Main power switch

Menu button

Input select button


34

40

98

# Part Names - Main Unit

## Rear view

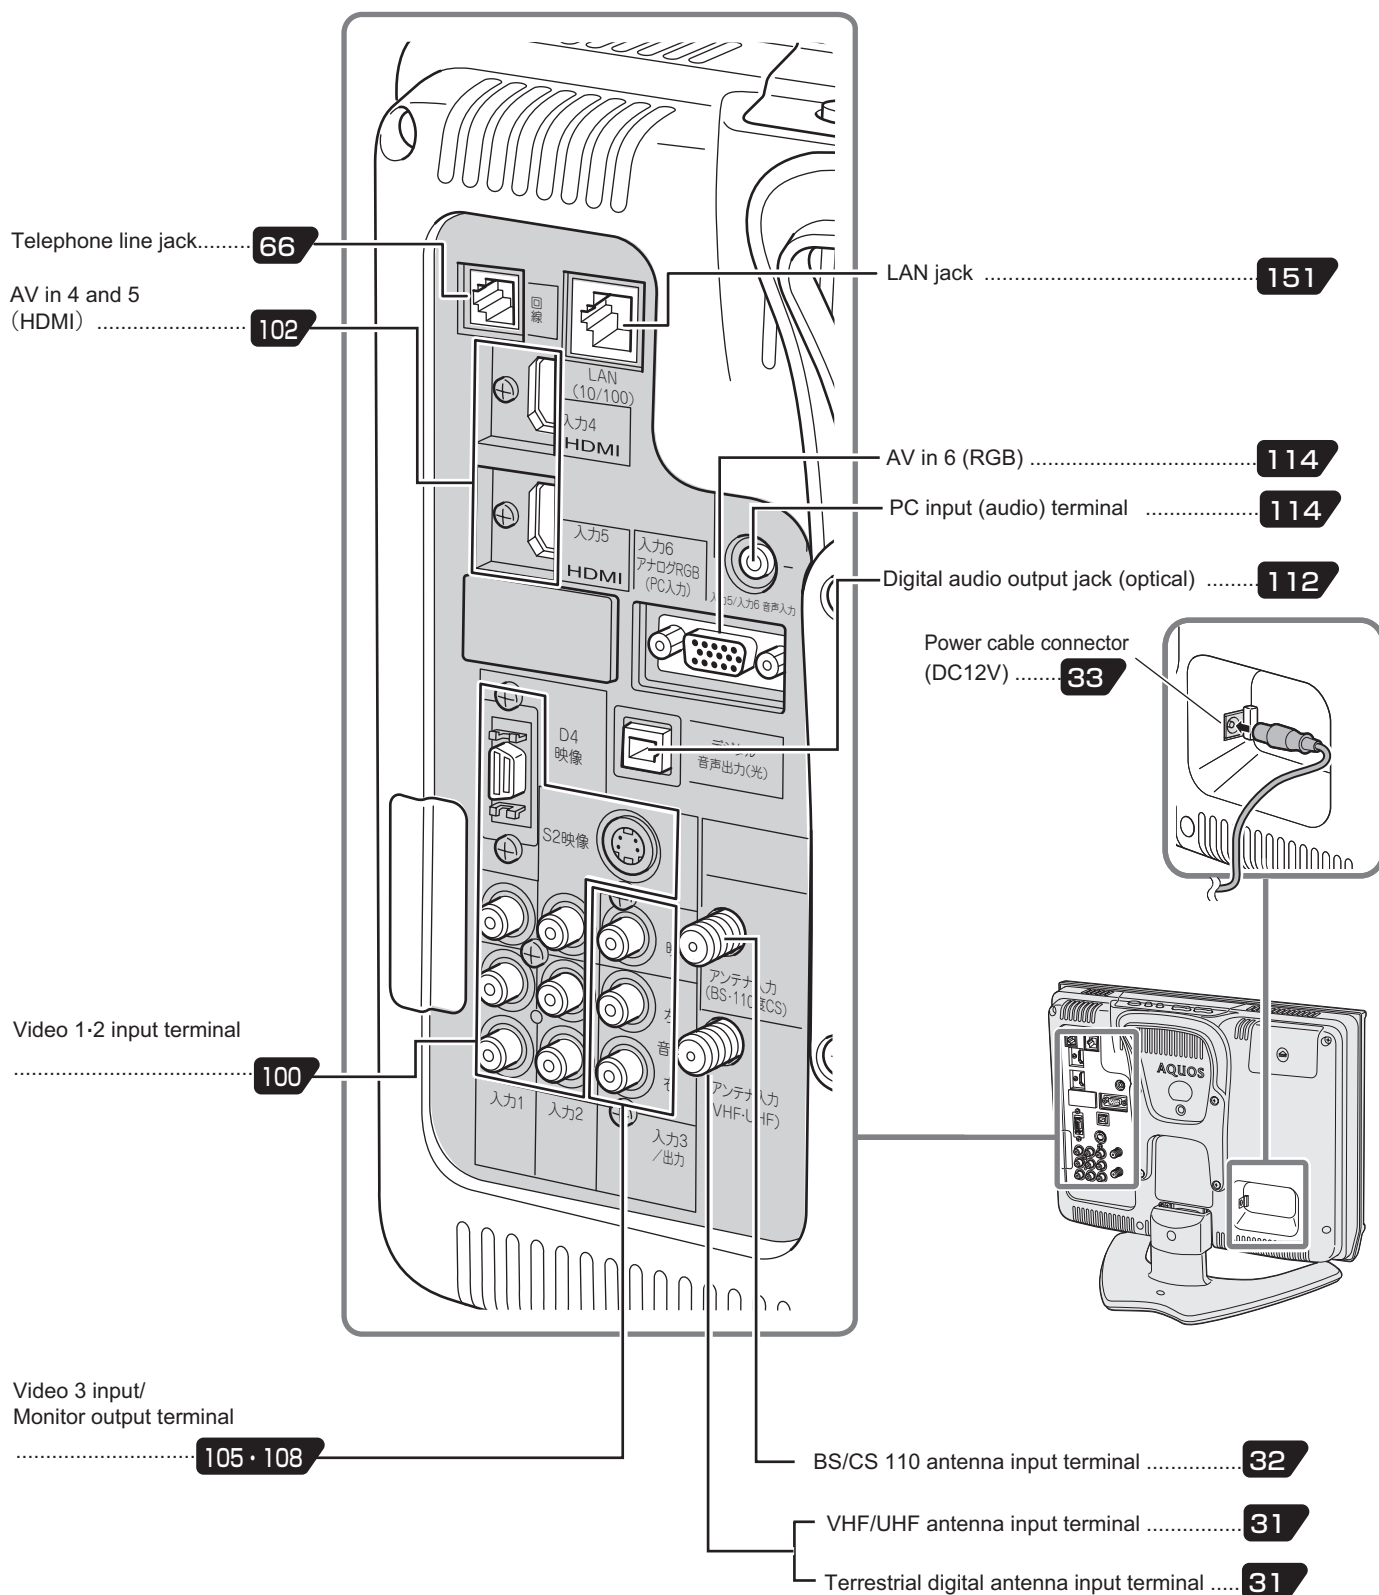

# Part Names - Remote Control Unit

Cover closed

**Display**.....82  
Press to display or turn off the channel call, etc.

**Active/Standby**.....34  
Press to engage the TV set in the active or standby mode.

**CATV**.....75  
When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons (1-10/0).

**Terrestrial digital select**.....61-74  
Press to select the terrestrial digital network.  
\* Use this button after the TV set is tuned to receive terrestrial digital broadcasts.

**Terrestrial analog select**.....49-74  
Press to select the terrestrial analog network.

**d (linked data broadcast)**.....80  
Press to call the data broadcast linked with the current digital TV program.

**Volume up (+)/down (-)**.....  
Press to adjust the volume.

**Mute**.....  
Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

**EPG**.....74-82  
Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

**Program info**.....80  
Press to display detailed information (e.g. title, genre, on-air time, cast, writer, etc.) on the current digital program.

**Cursor (up, down, left, right)**.....40  
Use to select a menu item, column, etc.

**Enter/Confirm**.....40  
Press to confirm a selected setting or menu item.

**Finish**.....40  
Press to turn off the EPG display, or finish menu operation, etc.

## Note

This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

**Color (blue, red, green, yellow)**.....80-82  
Use to operate EPGs and data program screens.

**Sleep timer**.....143  
Press to select the desired remaining time period after which the TV set is automatically turned off and enters the standby mode.

**Screen mode**.....116-125  
Press to select the desired screen size.

**Favorite channel select/register**.....75  
Press to select a user-registered channel and to turn on/off the favorite channel register/registered channel table screen.

**Digital channel number input**.....75  
When selecting a digital channel by entering the 3-digit channel number, press this button first, then enter the channel number with the channel select buttons (1-10/0).

**Channel select**.....74  
• Press to select a channel after selecting the desired network (terrestrial analog [地上A], terrestrial digital [地上D], BS, CS) and media (TV, radio, or data).  
• Use to input a number for various settings.

**CS select**.....74  
Press to select the CS digital networks.

**BS select**.....74  
Press to select the BS digital network.

**Media select**.....74  
Press to select the desired media (TV, radio, or data).


**Channel up (^)/down (v)**.....74  
Press to select channels in the current network, media and CATV channels in the ascending or descending order.  
\* CATV channels are factory set to be skipped.

**Input select**.....101-110  
Press to select the desired input.

**Other on-air programs**.....86  
Press to display the EPG for currently on-air programs only (裏番組).

**Menu**.....40  
Press to display or turn off the menu screen.  
The menus can be displayed in English. See page 44 for instructions on how to switch the display language.

**Return**.....40  
Press to go back to the previous screen. Press this button instead of the Enter/Confirm (決定) button when you have selected the wrong item or input the wrong number, etc.

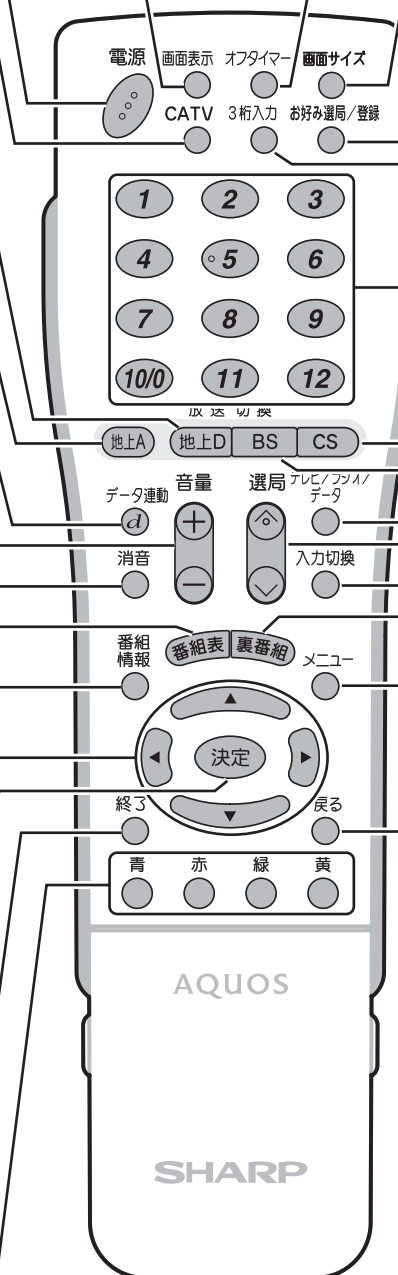

# Part Names - Remote Control Unit

## Cover open

### Digital channel register... 76-77

Press to display or turn off the channel register/registered channel table screen.

### Picture select... 79

Press to select the desired picture when watching a digital multi-picture program.

### AV mode select... 129

Press to select the picture/sound setting (dynamic [locked], dynamic, standard, cinema, game, or AV memory) that best matches the current program.

### Caption... 147


Press to display, select, or turn off captions when watching a digital program with captions.

### Audio select... 79-134


Press to select the desired audio (e.g. Japanese or English in bilingual broadcast, the main sound or a sub sound in digital multi-sound broadcast, etc.).

### To open the cover

Hold the cover by the projections on both sides and lift upwards.

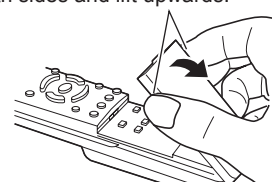

## Basic operation for channel selection

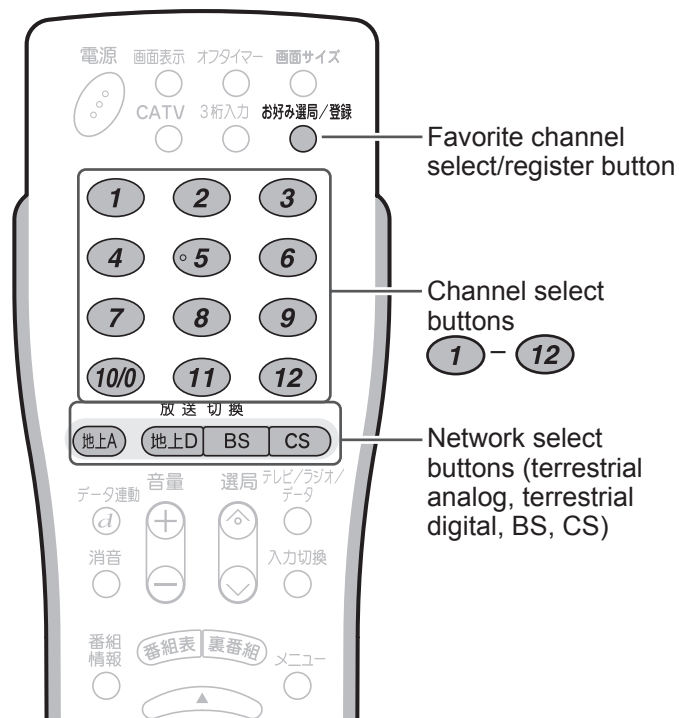

### Selecting terrestrial analog (VHF/UHF) channels

- ① Press **地上A** to select terrestrial analog broadcast.
- ② Press **1** - **12** to select the desired channel.

### Selecting digital channels

- ① Press **地上D**, **BS** or **CS** to select the desired digital broadcast network.
- ② Press **1** - **12** to select the desired channel.

#### Types of broadcast

- **地上A** Terrestrial analog: Conventional VHF/UHF broadcast
- **地上D** Terrestrial digital: Terrestrial digital broadcast
- **BS** BS: BS digital broadcast
- **CS** CS: CS 110 digital broadcast

■ For details about channel selection, see page 74.

### Selecting favorite channels

- ① Press **お好み選局/登録** to display the registered channel screen.
- ② Press **1** - **12** to select the desired channel.